



Shadowspec

# RETREAT<sup>TM</sup>


*The Wall Mounted Umbrella*

## INSTALLATION GUIDE

Operation, Care and Warranty

[www.shadowspec.com](http://www.shadowspec.com)

P01/22

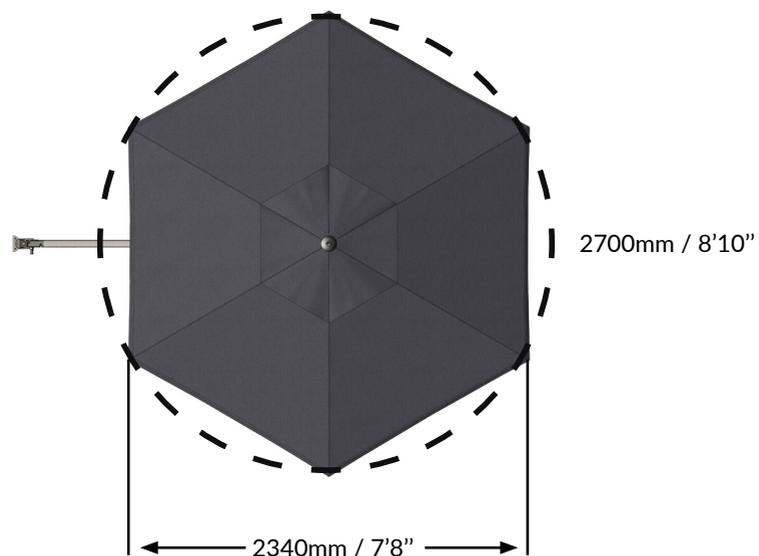


Read your manual in full before assembling your umbrella. To extend the life of your umbrella investment please read and follow the care instructions on a regular basis.

This document contains all the information you need to install your Shadowspec Retreat™


Thank you for your purchase, we appreciate it.

Enjoy the shade, courtesy of Shadowspec.

### Recommended Installation Height

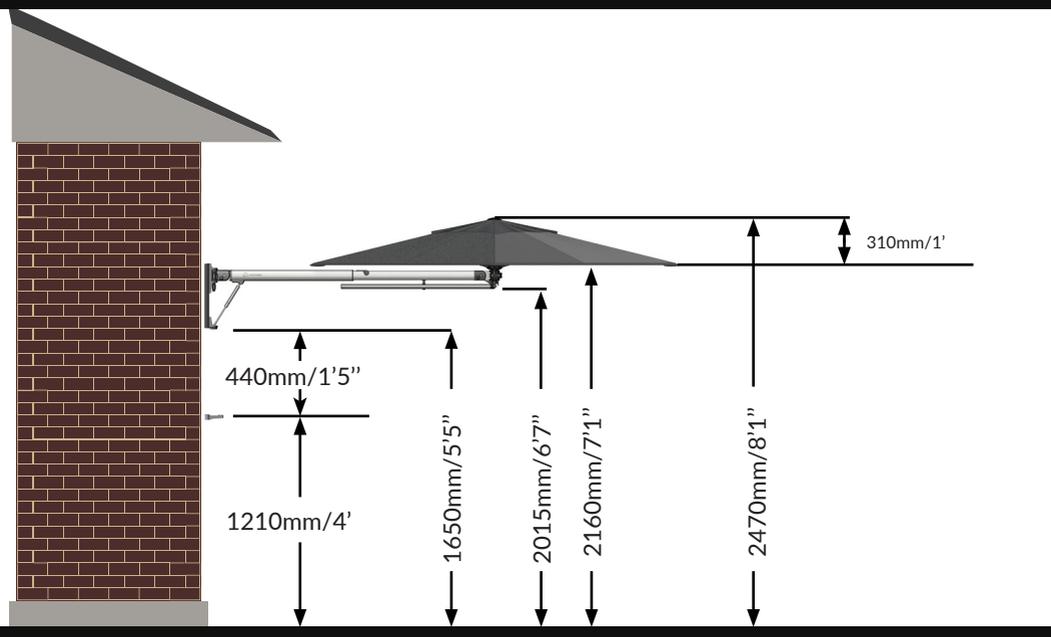



### What's in the Box?

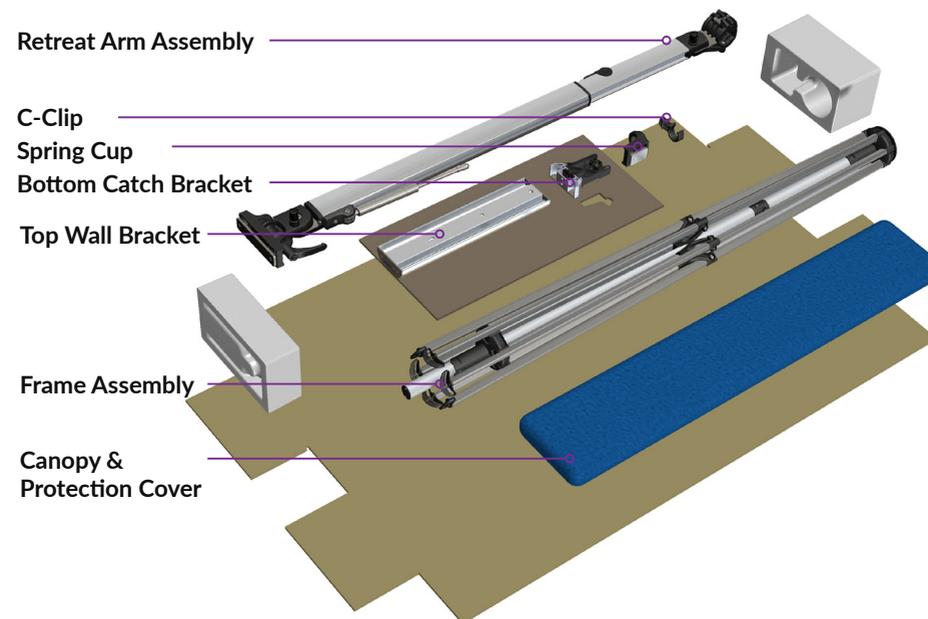




## 1. Install the Top Wall Bracket

- i: Choose a wall, pillar or post that is strong enough to mount the Retreat
- ii: Choose a 316 Stainless Steel Fastener that matches your structure. (Not included) **Fig. A.**
- iii: Using the Top Wall Bracket as a guide, mark holes on your wall at the desired height. **Fig. B.**  
We recommend 2205mm/7'3" measured from the top of the Top Wall Bracket to the Ground
- iv. Affix the Top Wall Bracket to the structure using the correct fixing option. **Fig. A.**
- v. Affix the Bottom Catch to the structure using the correct fixing option. **Fig. C.**

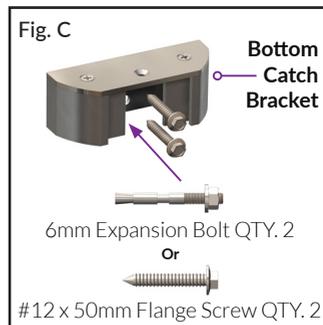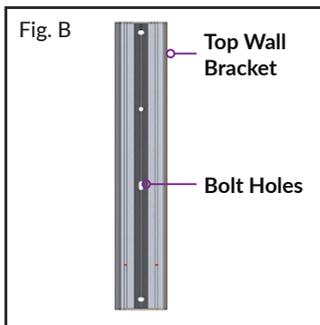



## 2. Mounting the Bottom Catch

Insert the Arm Retainer to the Bottom Catch Bracket with the End Plate Screw

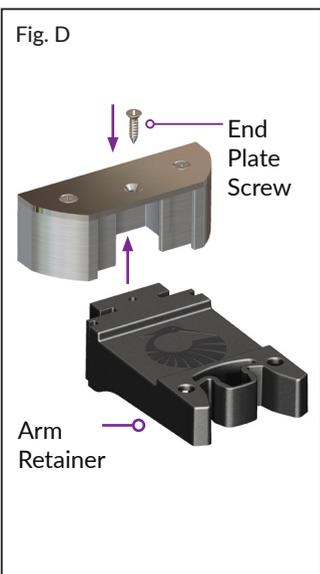




## 3. Mounting the Spring Cup

Slide the Spring Cup into the Top Wall Bracket and finger-tighten the screw.


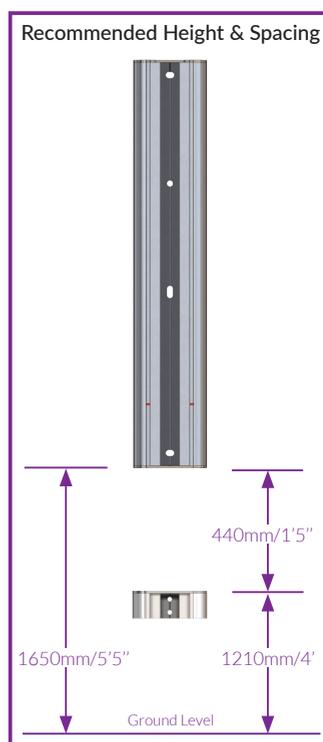
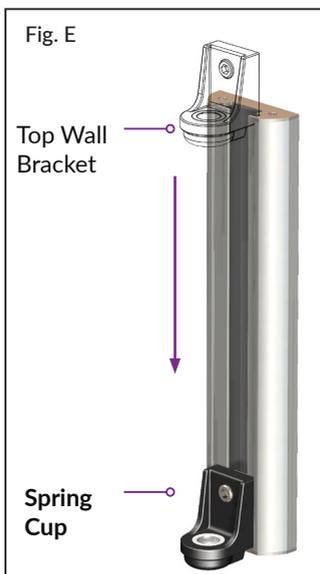


## 4. Mount the Arm Assembly

- i: Loosen the Shoulder Fixing Bolts so they do not restrict the Wall Grab Plate. **Fig. F.**
- ii: Lower the Retreat Arm into the Wall Mount Bracket until it settles in place. **Fig. G.**
- iii: **Fully Tighten** the Shoulder Fixing Bolts.

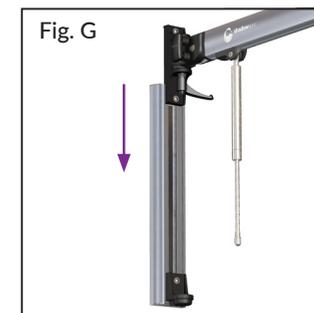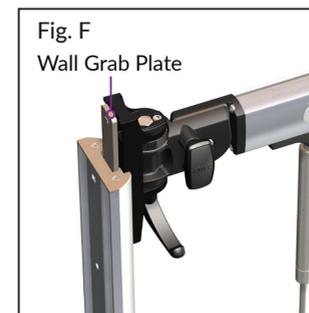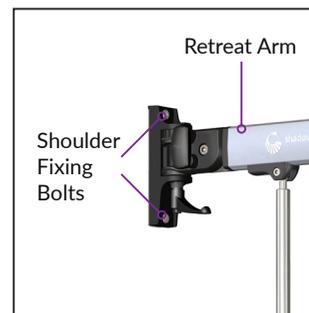


- iv: Pull the Shoulder Locking Pin. **Fig. H.**
- v. Push the Retreat Arm upward. **Fig. I.**
- vi. Swing the Gas Piston into the Spring Cup. **Fig. J.**

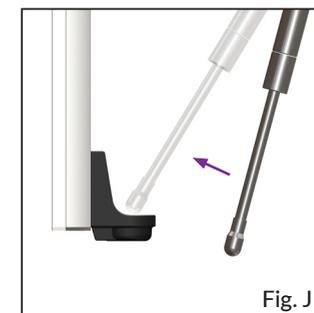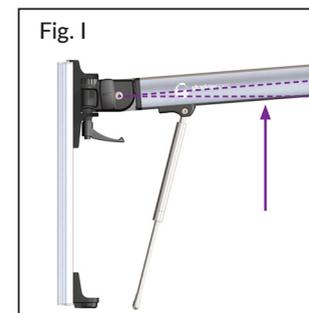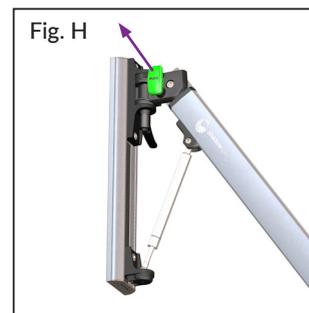

- vii. Lower Retreat Arm and push the Spring Cup Up to align with the marks on the Wall Mount. **Fig. K.**
- viii: Fully tighten the Spring Cup Bolt with supplied Hex Wrench. **Fig. L.**
- ix: Insert the C-Clip into the channel and twist to lock into place. **Fig. M.**











**Important: The Gas Spring's pressure is now engaged - take extreme care and affix the frame straight away.**

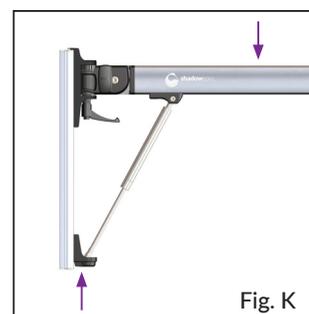



## 5. Fit the Canopy Frame

- i. Pull the Claw Latch Lever to open it. [Fig. N](#) / [Fig. O](#).
- ii. The Grab Latch will detach from the Bracket [Fig. P](#) / [Fig. Q](#).
- iii. Insert the Canopy Frame into the Claw Bracket [Fig. R](#).  
*Tip: Ensure the Canopy Notch fits into the front of the Claw Assembly*
- iv. Hook the Grab Latch into the Claw Notch and *reverse* the opening process to secure.  
[Fig. Q](#) > [Fig. N](#).

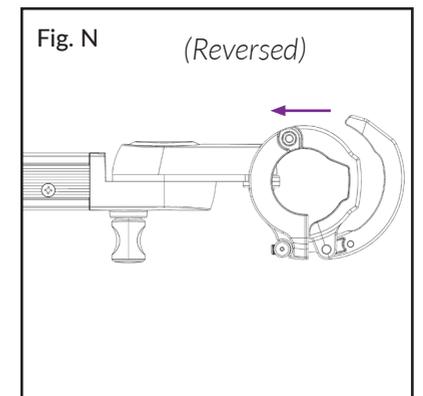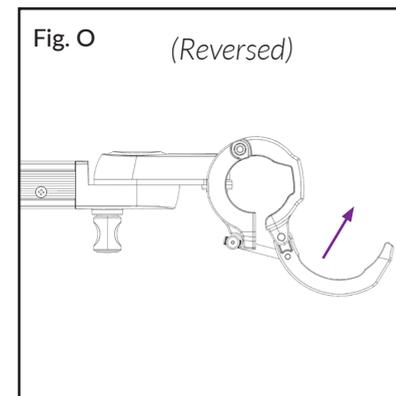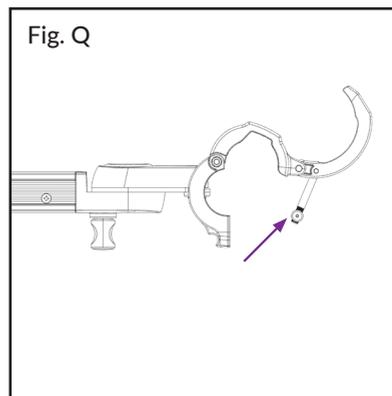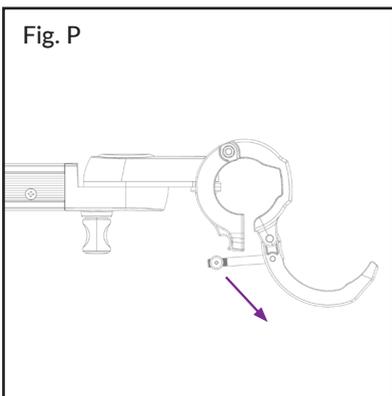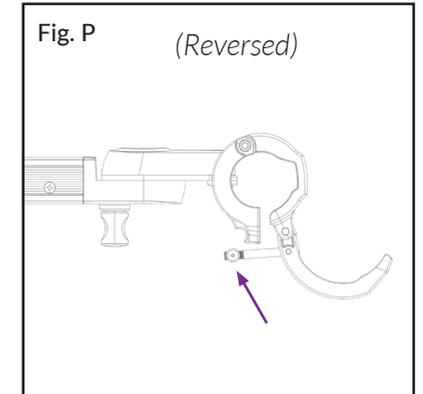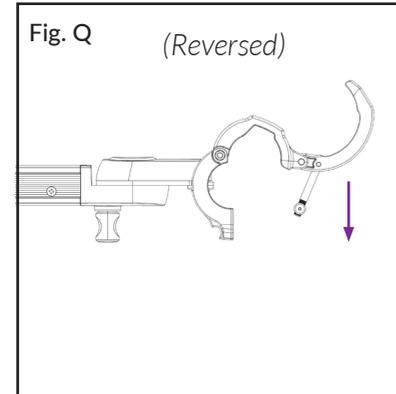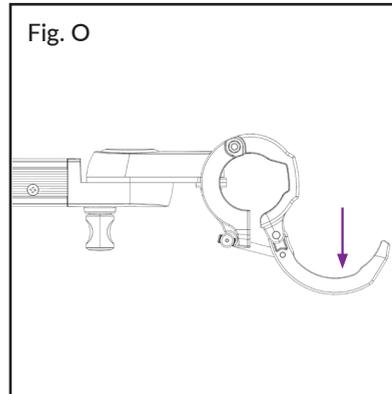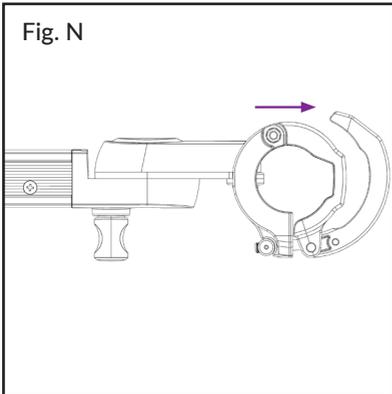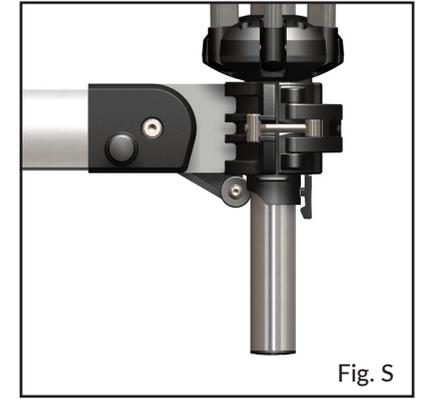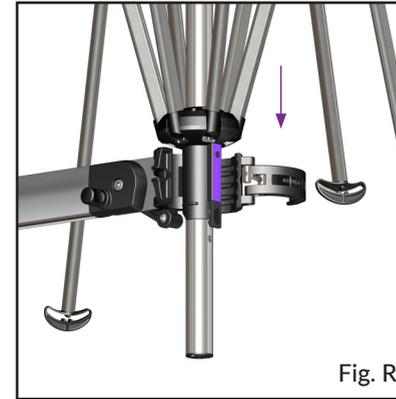



## 6. Fit Fabric Canopy

1: Pull the Shoulder Locking Pin. Fig. T:

2. Push downward the until it locks in the angled position. Fig. U.

*Tip: Take care as the Gas Spring will require some force to compress and the arm may swing up before it locks into place.*

3. Remove the Crown by removing the 2 Crown Screws. Fig. V.

4. Drape the Fabric Canopy over the Canopy Frame and insert the Rib Tips into the corelating Fabric Pockets. Fig. W.

5. Return the Crown and Crown Screws on top of the Canopy. Fig. X.

6. Deploy and Enjoy!

